

Configuration



Instructions

I

I

I

I

н

I

П I

I

L

I

I

I

I

L

I

I

I

I

l

I

I

I

I

L

н

I

I

I

I

I

Select all Required Options. Only add Additional Options if desired. Only add Outlet Fitting if different than Inlet Fitting. Contact support for revision or copy exact information.

П

П

r

Default options are highlighted 0. Model Internal Shuttle PSB100 External Control PSBEC100 1. Check Balls PTFE Check balls blank PFA Check balls F 2. Inlet Fitting (Front straight only) Flaretek 1/2 in. F08 Compatible 3/4 in F12 1 in. F16 1-1/4 in. F20 Pillar S-300 1/2 in. P08 Coce 3/4 in. P12 1 in. P16 1-1/4 in. P20 1-1/2 in. P24 Primelock 3/4 in. L12 1 in. 116 1-1/4 in. L20 Tube Adapter 3/4 in. T12 1 in. T16 1-1/4 in. T20 1-1/2 in. T24 FNPT 3/4 in. N12 1 in. N16 0 1-1/4 in. N20 3/4 in. Weldable W12 1 in. W16 Synchro 1/2 in. S08 0_0 3/4 in. S12 1 in S16 Accessible Disk Seal D Connection (No Fitting)

- Required Options - - - - Additional Options -

3. Leak Detection		
15 ft conductivity cable	LC0	
25 ft conductivity cable	LC1	
4. Stroke Detection		
No stroke detection	blank	
Single NPN Pressure Switch	SP1	
Dual NPN Pressure Switches * (Includes two DP2 pressure switches)	SP2	
Dual Pressure Switch * (No pressure switches included) Sensors are required for operation.	SP3	
Single PNP Pressure Switch	SP4	
Dual PNP Pressure Switches * (Includes two DP2 pressure switches)	SP5	



Timer mode operation requires end-of-stroke detection. Use of timer mode without stroke detection voids pump warranty.



5. Outlet Fitting Same Outlet as Inlet		Front	Тор
		blank	-
Flaretek Compatible	1/2 in.	FF08	TF08
	3/4 in.	FF12	TF12
	1 in.	FF16	TF16
	1-1/4 in.	FF20	TF20
Pillar S-300	1/2 in.	FP08	TP08
To and the second	3/4 in.	FP12	TP12
	1 in.	FP16	TP16
	1-1/4 in.	FP20	TP20
	1-1/2 in.	FP24	TP24
Primelock	3/4 in.	FL12	TL12
	1 in.	FL16	TL16
	1-1/4 in.	FL20	TL20
Tube Adapter	3/4 in.	FT12	TT12
	1 in.	FT16	TT16
	1-1/4 in.	FT20	TT20
	1-1/2 in.	FT24	TT24
FNPT	3/4 in.	FN12	TN12
\sim	1 in.	FN16	TN16
	1-1/4 in.	FN20	TN20
Weldable	3/4 in.	FW12	TW12
	1 in.	FW16	TW16
Synchro	1/2 in.	FS08	TS08
000	3/4 in.	FS12	TS12
	1 in.	FS16	TS16

Accessible disk seal connection is not available with different fittings.

6. Revision

Contact White Knight support for revision level or copy exact code activation details. Configured part numbers are not Copy Exact Part Numbers. Email: support@wkfluidhandling.com Phone: 435.783.6040

н

L

L

I.



PSB100 Ordering Instructions