

.

PFA015 Owner's Manual



Table of Contents

1. Product Information 1	
1.1 Specifications & Performance 1 1.2 Temperature Limits 2 1.3 Dimensions 2 1.4 Bill of Materials 3	2 2
2. Installation 4	1
2.1 Precautions42.2 Warnings52.3 Advantages52.4 Environment & System52.5 Installation Instructions6	5
3. Control & Monitoring 7	7
3.1 Shift Logic for Fiber-optic Pumps 8 3.2 Fiber Optic Stroke Detection Installation 9 3.3 Calibrating D10 Amplifier for Stroke Detection 9 3.4 Conductivity Leak Detection Installation 10 3.5 Fiber Optic Leak Detection Installation 10 3.6 Calibrating D10 Amplifier for Leak Detection 11	9 9 0
4. Ordering Instructions 12	2
5. Pump Service 13	B
5.1 Rebuild Kits & Parts 13 5.2 Return Pump for Service 14	
6. Warranty & Accessories 16	6





Dear valued customer.

Thank you for purchasing a White Knight PFA015 pump.

Our dedicated team designs products to meet your exacting specifications with a demonstrated commitment to quality that goes beyond mere words and fancy slogans.

Our patented designs offer a variety of size and material options to meet stringent requirements of high-pressure chemical delivery systems, hightemperature re-circulation processes, chemical reclaim and bulk transport applications, slurry systems, and more. Our safe, reliable products offer superior performance, optimized efficiency, and simplified maintenance.

White Knight is able to provide the highest quality fluid handling products through controlled, consistent in-house engineering and manufacturing. Through continued significant investments in engineering and manufacturing, we lead the industry with new technologies and products.

White Knight has received numerous awards for innovation and manufacturing programs. We rigorously manage our quality assurance processes to ensure consistency and reliability. Our quality controls include strict cleanliness procedures and consistent manufacturing processes. For example, high-purity product assembly, testing, and packaging is performed in a Class 100 cleanroom.

Please peruse this manual before installing your White Knight product. It details installation requirements and setup instructions, and provides additional information and accessories for enhanced functionality.

Our team has gone to great lengths to ensure our products serve your needs and meet your requirements.

Further, we provide the highest guality products at the best value, and we back them up with excellent warranties and world class support.

Thank you for your confidence and trust in White Knight products.

Sincerely,

White Knight Fluid Handling






1. Product Information

1.1 Specifications & Performance

Мос	lel	PFA015	PFASD015	
Мах	Flow Rate*	12.8 lpm (3.38 gpm)	TBD lpm (TBD gpm)	
	olacement Cycle*	0.089 liters (0.024 gal)	0.089 liters (0.024 gal)	
Сус	les per min	190 max	TBD max	
Air	Connection	1/4 in	1/4 in	
Wei	ght	2.4 kg (5.29 lb)	2.4 kg (5.29 lb)	
Suc	tion Lift*	3 m (10 ft)	Flooded suction	
Pressure**		69.54 dB(a) at 100 psi 50 CPM 66.58 dB(a) at 100 psi max CPM		
Sol	Power**	58.44 dB(a) at 100 psi 50 CPM 65.52 dB(a) at 100 psi max CPM		

* May vary by configuration or system. Suction lift diminishes over time. Recommended installation level less than 3 ft above source. To calculate displacement, divide flow rate by CPM. ** Sound measured in accordance with ISO9614-2:1997. *** Dry-run capable PFASD015 pumps require flooded suction and may have reduced warranty. Contact support for details.


Max Fluid Temperatur	е	100°C (212°F)	
Environmer Temperatur		min: 0°C (32°F) max: 50°C (122°F)	
Max Supply Air Pressur		7 Bar (100 psi)	
Min Startup Air Pressur		1.4 bar (20 psi)	
Fluid Path Materials		PTFE, PFA	
Non-Fluid F Materials	Path	PTFE, PFA, PP	
Stroke Detection	Fiber optic with or without D10 sensor		
Leak Detection	Fiber optic with or without sensor, or conductivity		
Electronic Control		CPT, or custom. r details.	

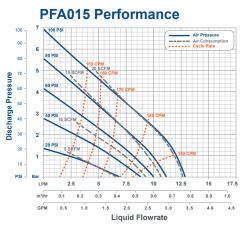

How to Read Charts

Draw a horizontal line at your discharge pressure and vertical line at desired flow rate. At line intersect, estimate required air pressure, resultant cycle rate and air consumption.

PFASD015 Performance

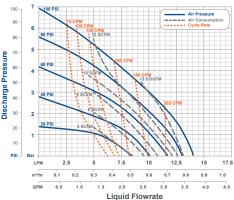

Example


At 2 Bar (30 psi) discharge pressure and 80 psi supply pressure, PFA015 pumps provide 8 lpm (2 gpm) flow rate. They would cycle at ~175 CPM, and exhaust 15 SCFM of air.

*Graph is for reference only. Performance was measured utilizing 1/2 in (3/8 in ID) air line and 1-1/4 in (1-1/8 in ID) liquid lines with 1 ft flooded suction. Performance may vary in your system.







1.2 Temperature Limits

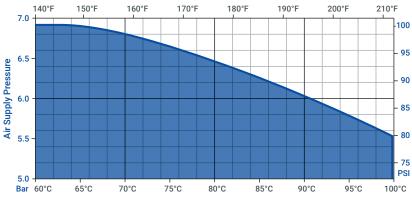

1.3 Dimensions

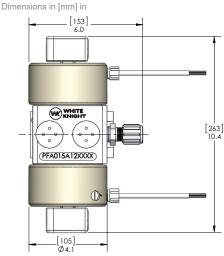

MOUNT WITH 2 EA. 3/8" (10 mm) SOCKET HEAD CAP SCREWS (11] (31] (31] (31] (31)

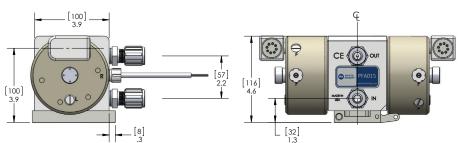



Copyright © 2023 White Knight Fluid Handling | A Graco company P: 435.783.6040 | support@wkfluidhandling.com | https://wkfluidhandling.com





1.4 Bill of Materials

PFA0	15 BILL OF MAT	ERIALS						0	00				
TEM	PART	Description	Q	ΓY.				1	• •			OPTIONAL CO	
1	1125-TE-0028	Pump Body		1			(7				USE WITH SIN	IGLE PF
2	2127-EP-0020	Head, Right		1			(\cup	0			STROKE DET	ECT
3	2127-EP-0021	Head, Left		1					0			6	1
ŀ	3200-VI-0001	Diaphragm, Ø.782		2					-	\sim			16
	4100-MP-0004	Ball, Check, 1/2"		4						(5)			1111
	4135-MP-0006	Seat, Check		2				0		S			1111
'	4140-TE-0001	Top Check Plug		2				(8)	00			Illun	
	4142-MP-0004	Cage, Check		2				0	0	\bigcirc		1) KA	
)	5143-MP-0001	Seal, Shaft		2					-	(6)	-	Ke	AUK
0	5144-PF-0024	Shaft		1					Paral	-	1		M
1	6090-UH-0003	QEH Body, 05		2					U)	_		2	-
2	6140-FP-0002	Baffle Porous Poly QEV		4					T			100	
3	6140-PP-0004	Mesh, QEV 04 & 05		6				1	300			8.0	
4	6150-NP-0007	Cap, Muffler, QEV		2			\bigcirc	6	-	100		-	
5	6150-UH-0001	Seat, QEV Exhaust		2			(1)			52	>		
6	7200-PF-0003	Body, Flaretek®, 1/2"		2			0	100	1000	1			
7	7210-PF-0003	Nut, Flaretek®, 1/2"		2					1	1	1		
8	8100-PF-0002	Cap, End, Single		2			60			6	la	20	
		Probe Dual Detect					(f			YUE			-
9	10040-TE-0003	Plug, NPT, 1/4"		2			U U				SO)	(3)	
20	10040-TE-0006	5/8" Plug Short		2						-		S	-
1	10080-VI-016-75	O-ring, 016 X .070		2			(10)	1		M "	/	$\widehat{\mathbf{u}}$	
2	14200-NP-0006	Plate, Base, Assembly		1		(9)	~/	10	All -	0		」 火9(17)
23	14300-MP-0031	Bellows Assembly, Single Probe Dual Detec		1		\leq	Y					V - 90	/
24	14300-PF-0016	Bellows Assembly		2		6		1			And	0.0	
	14700-XX-0006	Stroke Detect Fiber Optic		2	-					>	-		
5		Assembly with Wire Cutt	or		11						< 20		
25				0			-24	22-				Assemblies	Body In
5		2		3			-24	22-	Fittings (T)			Assemblies	(Nut not
5		2		0			24)	22-	Flaretek	1/4 in.	F04	14510-PF-0016	(Nut not 7200-P
		2					-24	22-		1/4 in. 3/8 in.	F04 F06	14510-PF-0016 14510-PF-0001	(Nut not 7200-F 7200-F
		2					-24 -24	22-	Flaretek	1/4 in. 3/8 in. 1/2 in.	F04 F06 F08	14510-PF-0016 14510-PF-0001 14510-PF-0002	(Nut not 7200-F 7200-F 7200-F
		2					-24	22-	Flaretek	1/4 in. 3/8 in.	F04 F06	14510-PF-0016 14510-PF-0001	(Nut not 7200-F 7200-F 7200-F
		2				25	-24	22-	Flaretek	1/4 in. 3/8 in. 1/2 in. 3/4 in.	F04 F06 F08	14510-PF-0016 14510-PF-0001 14510-PF-0002	(Nut not 7200-F 7200-F 7200-F 7200-F
		2					-24	22-	Flaretek Compatible	1/4 in. 3/8 in. 1/2 in. 3/4 in. 3/8 in.	F04 F06 F08 F12 T06	14510-PF-0016 14510-PF-0001 14510-PF-0002 14510-PF-0003 7120-P	(Nut not 7200-F 7200-F 7200-F 7200-F F-0001
		2				OPTIONAL	-24	22-	Flaretek Compatible	1/4 in. 3/8 in. 1/2 in. 3/4 in. 3/8 in. 1/2 in.	F04 F06 F08 F12 T06 T08	14510-PF-0016 14510-PF-0001 14510-PF-0002 14510-PF-0003 7120-P 7120-P	(Nut not 7200-F 7200-F 7200-F 7200-F F-0001 F-0002
		2						22-	Flaretek Compatible Tube Out	1/4 in. 3/8 in. 1/2 in. 3/4 in. 3/8 in. 1/2 in. 3/4 in.	F04 F06 F08 F12 T06 T08 T12	14510-PF-0016 14510-PF-0001 14510-PF-0002 14510-PF-0003 7120-P 7120-P 7120-P 7120-P	(Nut not 7200-F 7200-F 7200-F 7200-F F-0001 F-0002 F-0003
						OPTIONAL		22-	Flaretek Compatible	1/4 in. 3/8 in. 1/2 in. 3/4 in. 3/8 in. 1/2 in. 3/4 in. 1/2 in.	F04 F06 F08 F12 T06 T08 T12 W08	14510-PF-0016 14510-PF-0001 14510-PF-0002 14510-PF-0003 7120-P 7120-P 7120-P 7120-P 7300-P	(Nut not 7200-F 7200-F 7200-F 7200-F F-0001 F-0002 F-0003 F-0001
		2 19 19 13 Leek D		14		OPTIONAL NOT INCLU		22-	Flaretek Compatible Tube Out Weldable	1/4 in. 3/8 in. 1/2 in. 3/4 in. 3/8 in. 1/2 in. 3/4 in. 1/2 in. 3/4 in.	F04 F06 F08 F12 T06 T08 T12 W08 W12	14510-PF-0016 14510-PF-0001 14510-PF-0002 14510-PF-0003 7120-P 7120-P 7120-P 7120-P 7300-P 7300-P	(Nut not 7200-F 7200-F 7200-F 7200-F F-0001 F-0002 F-0003 F-0001 F-0002
		2 19 19 13 Leak D Part	etect			OPTIONAL NOT INCLU	JDED		Flaretek Compatible Tube Out	1/4 in. 3/8 in. 1/2 in. 3/4 in. 3/8 in. 1/2 in. 3/4 in. 1/2 in. 3/4 in. 1/2 in.	F04 F06 F08 F12 T06 T08 T12 W08 W12 P04	14510-PF-0016 14510-PF-0001 14510-PF-0002 14510-PF-0003 7120-P 7120-P 7120-P 7120-P 7300-P 7300-P 7300-P 14530-PF-0025	(Nut not 7200-F 7200-F 7200-F 7200-F F-0001 F-0002 F-0003 F-0001 F-0002 7400-T
		2 19 19 12 13 Leak D Part 14600-X	etect	LF0	15 ft f	OPTIONAL NOT INCLU	JDED		Flaretek Compatible Tube Out Weldable	1/4 in. 3/8 in. 1/2 in. 3/4 in. 3/8 in. 1/2 in. 3/4 in. 1/2 in. 3/4 in.	F04 F06 F08 F12 T06 T08 T12 W08 W12	14510-PF-0016 14510-PF-0001 14510-PF-0002 14510-PF-0003 7120-P 7120-P 7120-P 7120-P 7300-P 7300-P	(Nut not 7200-F 7200-F 7200-F 7200-F F-0001 F-0002 F-0003 F-0001 F-0002 7400-T
		2 (19) (19) (12) (13) (12) (12) (13) (12) (12) (12) (12) (12) (12) (12) (13) (12) (12) (13) (12) (13) (13) (13) (13) (14) (14) (15) (15) (15) (15) (15) (15) (15) (15	etect x-0009 x-0010	LF0 LF1	15 ft f 15 ft f	OPTIONAL NOT INCLU	JDED ith no amplifier ith D10 amplifier	r	Flaretek Compatible Tube Out Weldable	1/4 in. 3/8 in. 1/2 in. 3/4 in. 3/8 in. 1/2 in. 3/4 in. 1/2 in. 3/4 in. 1/2 in.	F04 F06 F08 F12 T06 T08 T12 W08 W12 P04	14510-PF-0016 14510-PF-0001 14510-PF-0002 14510-PF-0003 7120-P 7120-P 7120-P 7120-P 7300-P 7300-P 7300-P 14530-PF-0025	(Nut not 7200-F 7200-F 7200-F 7200-F F-0001 F-0002 F-0003 F-0001 F-0002 7400-T 7400-T
		2 19 19 12 12 13 Leak D Part 1400.X 1400.X 1400.X	etect x-0009 x-0010 x-0011	LF0 LF1 LF2	15 ft f 15 ft f 25 ft f	OPTIONAL NOT INCLU	JDED ith no amplifier ith D10 amplifier ith no amplifier	r ier r	Flaretek Compatible Tube Out Weldable	1/4 in. 3/8 in. 1/2 in. 3/4 in. 3/8 in. 1/2 in. 3/4 in. 1/2 in. 3/4 in. 1/2 in. 3/4 in. 1/2	F04 F06 F08 F12 T06 T08 T12 W08 W12 P04 P06 P08	14510-PF-0016 14510-PF-0001 14510-PF-0002 14510-PF-0002 14510-PF-0002 7120-P 7120-P 7120-P 7120-P 71300-P 7300-P 14530-PF-0012 14530-PF-0012	(Nut not 7200-F 7200-F 7200-F 7200-F F-0001 F-0002 F-0003 F-0001 F-0002 7400-T 7400-T 7400-T
		2 19 19 19 12 13 Leak D Part 14002X 14002X 14002X	etect x-0009 x-0010 x-0011 x-0012	LF0 LF1 LF2 LF3	15 ft f 15 ft f 25 ft f 25 ft f	OPTIONAL NOT INCLU	JDED ith no amplifier ith D10 amplifier ith no amplifier ith D10 amplifier	r ier r	Flaretek Compatible Tube Out Weldable Pillar S-300	1/4 in. 3/8 in. 1/2 in. 3/4 in. 3/8 in. 1/2 in. 3/4 in. 1/2 in. 3/4 in. 1/2 in. 3/4 in. 1/2 in. 3/4 in. 1/2 in. 3/4 in. 1/2 in. 3/4 in. 3/4 in. 3/4 in. 1/2 in. 3/4 in. 3/8 in. 3/8 in. 3/8 in. 3/4 in. 3/8 in. 3/4 in. 3/8 in. 3/4 in. 3/8 in. 3/4 in. 3/4 in. 3/8 in. 3/4 in. 3/4 in. 3/8 in. 3/4 in. 3/8 in. 3/4 in. 3/8	F04 F06 F08 F12 T06 T08 T12 W08 W12 P04 P06 P08 P12	14510-PF-0016 14510-PF-0001 14510-PF-0003 14510-PF-0003 7120-P 7120-P 7300-P 14530-PF-0025 14530-PF-0012 14530-PF-0002	(Nut not 7200-F 7200-F 7200-F 7200-F F-0001 F-0002 F-0003 F-0001 F-0002 7400-T 7400-T 7400-T 7400-T
		2 19 19 19 10 12 1400 1400 1400 1400 1400 1400 140	etect x-0009 x-0010 x-00112 x-0031	LF0 LF1 LF2 LF3 LC0	15 ft f 15 ft f 25 ft f 25 ft f 15 ft d	OPTIONAL NOT INCLU	JDED ith no amplifier ith D10 amplifier ith no amplifier ith D10 amplifie	r ier r	Flaretek Compatible Tube Out Weldable	1/4 in. 3/8 in. 1/2 in. 3/4 in. 3/8 in. 1/2 in. 3/4 in. 1/2 in. 1/4 in. 1/2 in. 1/4 in. 1/4 in. 1/4 in. 1/4 in. 1/4 in. 1/4 in. 1/4 in. 1/4 in. 1/4 in.	F04 F06 F08 F12 T06 T08 T12 W08 W12 P04 P06 P08 P12 N04	14510-PF-0016 14510-PF-0001 14510-PF-0002 14510-PF-0003 7120-P 7120-P 7120-P 7300-P 14530-PF-0025 14530-PF-0012 14530-PF-0002 14530-PF-0002 7100-T	(Nut not 7200-F 7200-F 7200-F 7200-F F-0001 F-0002 F-0003 F-0001 F-0002 7400-T 7400-T 7400-T 7400-T 7400-T 7400-T E-0001
		2 19 19 19 12 13 Leak D Part 14002X 14002X 14002X	etect x-0009 x-0010 x-00112 x-0031	LF0 LF1 LF2 LF3	15 ft f 15 ft f 25 ft f 25 ft f 15 ft d	OPTIONAL NOT INCLU	JDED ith no amplifier ith D10 amplifier ith no amplifier ith D10 amplifie	r ier r	Flaretek Compatible Tube Out Weldable Pillar S-300	1/4 in. 3/8 in. 1/2 in. 3/4 in. 3/8 in. 1/2 in. 3/4 in. 1/2 in. 3/8 in. 1/2 in. 3/4 in. 1/2 in. 3/8 in. 1/4	F04 F06 F08 F12 T06 T08 T12 W08 W12 P04 P06 P08 P12 N04 N06	14510-PF-0016 14510-PF-0001 14510-PF-0003 7120-P 7120-P 7120-P 7120-P 71300-P 14530-PF-0012 14530-PF-0012 14530-PF-0011 14530-PF-0001 14530-PF-0001 14530-PF-0001 14530-PF-0002 7100-T 7100-T	(Nut not 7200-F 7200-F 7200-F 7200-F F-0001 F-0002 F-0003 F-0001 F-0002 7400-T 7400-T 7400-T 7400-T 7400-T E-0001 E-0002
		2 19 19 19 10 12 1400 1400 1400 1400 1400 1400 140	etect x-0009 x-0010 x-00112 x-0031	LF0 LF1 LF2 LF3 LC0	15 ft f 15 ft f 25 ft f 25 ft f 15 ft d	OPTIONAL NOT INCLU	JDED ith no amplifier ith D10 amplifier ith no amplifier ith D10 amplifie	r ier r	Flaretek Compatible Tube Out Weldable Pillar S-300	1/4 in. 3/8 in. 1/2 in. 3/4 in. 3/8 in. 1/2 in. 3/4 in. 1/2 in. 1/4 in. 1/2 in. 1/4 in.	F04 F06 F08 F12 T06 T08 T12 W08 W12 P04 P06 P08 P12 N04	14510-PF-0016 14510-PF-0001 14510-PF-0002 14510-PF-0003 7120-P 7120-P 7120-P 7300-P 14530-PF-0025 14530-PF-0012 14530-PF-0002 14530-PF-0002 7100-T	(Nut not 7200-F 7200-F 7200-F 7200-F F-0001 F-0002 F-0003 F-0001 F-0002 7400-T 7400-T 7400-T 7400-T 7400-T E-0001 E-0002
		2 19 19 12 13 Leak D Part 14600X 14600X 14600X 14600X	etect	LF0 LF1 LF2 LF3 LC0 LC1	15 ft f 15 ft f 25 ft f 25 ft f 15 ft d	OPTIONAL NOT INCLU	JDED ith no amplifier ith D10 amplifier ith no amplifier ith D10 amplifie	r ier r	Flaretek Compatible Tube Out Weldable Pillar S-300	1/4 in. 3/8 in. 1/2 in. 3/4 in. 3/8 in. 1/2 in. 3/4 in. 1/2 in. 3/8 in. 1/2 in. 3/4 in. 1/2 in. 3/8 in. 1/4	F04 F06 F08 F12 T06 T08 T12 W08 W12 P04 P06 P08 P12 N04 N06	14510-PF-0016 14510-PF-0001 14510-PF-0003 7120-P 7120-P 7120-P 7120-P 71300-P 14530-PF-0012 14530-PF-0012 14530-PF-0011 14530-PF-0001 14530-PF-0001 14530-PF-0001 14530-PF-0002 7100-T 7100-T	(Nut not 7200-F 7200-F 7200-F 7200-F F-0002 F-0003 F-0001 F-0002 7400-1 7400-1 7400-1 7400-1 7400-1 7400-1 E-0001 E-0002 E-0003
		2 (19) (19) (12) (13) (1400X)	etect	LF0 LF1 LF2 LF3 LC0 LC1	15 ft f 15 ft f 25 ft f 25 ft f 15 ft c	OPTIONAL NOT INCLU	JDED ith no amplifier ith D10 amplifier ith no amplifier ith D10 amplifie	r ier r	Flaretek Compatible Tube Out Weldable Pillar S-300	1/4 in. 3/8 in. 1/2 in. 3/4 in. 3/8 in. 1/2 in. 3/4 in. 1/2 in. 3/8 in. 1/2 in.	F04 F06 F08 F12 T06 T08 T12 W08 W12 P04 P06 P08 P12 N04 N06 N08	14510-PF-0016 14510-PF-0001 14510-PF-0003 7120-P 7120-P 7120-P 7300-P 7300-P 7300-P 14530-PF-0025 14530-PF-0025 14530-PF-0025 14530-PF-0022 7100-T 7100-T 7100-T 7100-T 7100-T	(Nut not 7200-F 7200-F 7200-F 7200-F F-0002 F-0003 F-0001 7400-1 7400-1 7400-1 7400-1 7400-1 7400-1 7400-1 7400-1 7400-1 8-0001 E-0001 E-0002 E-0003 E-0007
		2 19 19 12 12 12 1400X	etect *.0019 *.0011 *.0011 *.0011 *.0011 *.0011 Detect	LF0 LF1 LF2 LF3 LC0 LC1 Descr	15 ft 1 15 ft 1 25 ft 1 25 ft 1 15 ft 0 25 ft 0	OPTIONAL NOT INCLU	JDED ith no amplifier ith D10 amplifie ith no amplifie ith D10 amplifie	ier ier ier	Flaretek Compatible Tube Out Weldable Pillar S-300 FNPT Synchro-	1/4 in. 3/8 in. 1/2 in. 3/4 in. 3/4 in. 1/2 in. 3/8	F04 F06 F08 F12 W08 W12 P04 P06 P08 P12 N04 N06 N08 N12 S06	14510-PF-0016 14510-PF-0001 14510-PF-0003 7120-P 7120-P 7120-P 7120-P 71300-P 71300-P 14530-PF-0012 14530-PF-0012 14530-PF-0012 14530-PF-0012 14530-PF-0012 14530-PF-0012 7100-T 7100-T 7100-T 7100-T 7100-T	(Nut not 7200-F 7200-F 7200-F 7200-F 7200-F 7200-F 7200-F F-0001 F-0002 7400-1 7400-1 7400-1 7400-1 7400-1 7400-1 8-0001 E-0002 E-0003 E-0003 E-0007 7010-1
		2 19 19 12 12 13 Leak D Part 14002X 1400X 1	etect x-0009 x-0011 x-0014 x-0012 Detect x-0021	LF0 LF1 LF2 LF3 LC0 LC1 Descr SFS0	15 ft 1 25 ft 1 25 ft 1 15 ft 0 25 ft 0	OPTIONAL NOT INCLU fiber optic cable wi fiber optic cable wi fiber optic cable wi conductivity cable conductivity cable	JDED ith no amplifier ith D10 amplifier ith D10 amplifier ith D10 amplifier ith no amplifier	r ier ier ier ier ier ier ier ier ier ie	Flaretek Compatible Tube Out Weldable Pillar S-300 FNPT	1/4 in. 3/8 in. 1/2 in. 3/4 in. 3/4 in. 1/2 in. 3/8 in. 1/2	F04 F06 F08 F12 T06 T12 W08 W12 P04 P06 P08 P12 N04 N06 N08 N12 S06 S08	14510-PF-0016 14510-PF-0001 14510-PF-0003 14510-PF-0003 7120-P 7120-P 7120-P 7300-P 14530-PF-0025 14530-PF-0025 14530-PF-0001 14530-PF-0001 14530-PF-0001 14530-PF-0009 14520-TE-0009	(Nut not 7200-F 7200-F 7200-F 7200-F 7200-F 7200-F F-0001 F-0002 7400-1 7000-10
		2 19 19 19 10 10 10 14002X 140	etect x-0009 x-0010 x-0012 x-0021 x-0021 x-0021 x-0022 x-0021 x-0022 x-0021 x-0022 x-0021 x-0022 x-0021 x-0022 x-0022 x-0022 x-0021 x-0022 x-0021 x-0022 x-0021 x-0022 x-0021 x-0022 x-0021 x-0022 x-0021 x-0022 x-0021 x-0021 x-0021 x-0021 x-0021 x-0021 x-0021 x-0021 x-0021 x-0021 x-0021 x-002 x-02 x	LF0 LF1 LF2 LF3 LC0 LC1 Descr SFS0 SFS1	15 ft 1 25 ft 1 25 ft 1 25 ft 0 25 ft 0 25 ft 0	OPTIONAL NOT INCLU	JDED ith no amplifier ith D10 amplifier ith D10 amplifier ith D10 amplifier ith no amplifier ith no amplifier	ır iler iler iler iler iler r SFS0 iler SFS1	Flaretek Compatible Tube Out Weldable Pillar S-300 FNPT Synchro- Flaretek Synchro- Flaretek	1/4 in. 3/8 in. 1/2 in. 3/4 in. 3/4 in. 1/2 in. 3/4 in. 1/2 in. 3/4 in. 1/2 in. 3/4 in. 1/4 in. 3/8 in. 1/2 in. 3/8 in. 1/2 in. 3/4 in. 1/2 in. 3/8 in. 1/2 in. 3/4 in. 1/2 in. 3/8 in. 1/2 in. 3/4 in. 1/2 in. 3/8 in. 1/2 in. 3/8 in. 1/2 in. 3/8 in. 1/2 in. 3/4 in. 1/2 in. 3/8 in. 1/2 in. 3/4 in. 3/	F04 F06 F08 F12 T06 T08 T12 W08 W12 P04 P06 P08 P12 N04 N06 N08 N08 N12 S06 S08 S12	14510-PF-0016 14510-PF-0001 14510-PF-0003 7120-P 7120-P 7120-P 7120-P 7120-P 7120-P 7120-P 7100-T 14530-PF-0025 14530-PF-0025 14530-PF-0021 14530-PF-0002 7100-T 71	(Nut not 7200-F 7200-F 7200-F F-0001 F-0002 F-0003 F-0001 F-0002 7400-1 7400-1 7400-1 7400-1 7400-1 7400-1 7400-1 7400-1 7400-1 7400-1 7400-1 7010-1 7010-1
		2 19 19 19 12 13 Leak D Part 14000X 14600X 14600X 14600X 14600X 14600X 14600X 14600X 14600X 14700X	etect	LF0 LF1 LF2 LF3 LC0 LC1 Descr SFS0 SFS1 SFS2	15 ft 1 25 ft 1 25 ft 1 25 ft 0 25 ft 0 25 ft 0 15 ft 1 15 ft 1 15 ft 1 25 ft 1	OPTIONAL NOT INCLU fiber optic cable w fiber optic cable w conductivity cable conductivity cable fiber optic cable w fiber optic cable w fiber optic cable w fiber optic cable w	JDED ith no amplifier ith D10 amplifier ith D10 amplifier ith no amplifier ith D10 amplifier ith D10 amplifier ith no amplifier	r ier ier ier r SFS0 ier SFS1 r SFS2	Flaretek Compatible Tube Out Weldable Pillar S-300 FNPT Synchro- Flare PrimeLock	1/4 in. 3/8 in. 1/2 in. 3/4 in. 3/4 in. 1/2 in. 3/8 in. 1/2	F04 F06 F08 F12 T06 T08 T12 W08 W12 P04 P06 P08 P12 N04 N06 N08 N08 N12 S06 S08 S12 L04	14510-PF-0016 14510-PF-0001 14510-PF-0003 7120-P 7120-P 7120-P 71300-P 71300-P 71300-P 7300-P 7300-P 7300-P 7300-P 7300-P 7300-P 7300-P 7300-P 7300-P 7300-P 7300-P 7300-P 7100-T	(Nut not 7200-F 7200-F 7200-F 7200-F 7200-F 7200-F 7200-F 7200-F 7200-7 7200-7 7200-7 7400-7 7400-7 7400-7 7400-7 7400-7 7400-7 7400-7 7010-7 7010-7 7010-7 7010-7 7010-7 7010-7 7010-7
		2 19 19 19 10 12 1400 1400 1400 1400 1400 1400 1400 1400 1400 1400 1400 1400 1400 1400 1470 1	etect	LF0 LF1 LF2 LF3 LC0 LC1 Descr SFS0 SFS1 SFS2 SFS3	15 ft 1 25 ft 1 25 ft 1 25 ft 0 25 ft 0 25 ft 0 15 ft 1 15 ft 1 25 ft 1 25 ft 1 25 ft 1	OPTIONAL NOT INCLU	JDED ith no amplifier ith D10 amplifier ith D10 amplifier ith D10 amplifier ith no amplifier ith no amplifier ith no amplifier	r ier ir ier r SFS0 ier SFS1 ir SFS2 ier SFS3	Flaretek Compatible Tube Out Weldable Pillar S-300 FNPT Synchro- Flare PrimeLock	1/4 in. 3/8 in. 1/2 in. 3/4 in. 3/4 in. 1/2 in. 3/4 in. 1/2 in. 3/4 in. 1/2 in. 3/4 in. 1/4 in. 3/8 in. 1/2 in. 3/8 in. 1/2 in. 3/4 in. 1/2 in. 3/8 in. 1/2 in. 3/4 in. 1/2 in. 3/8 in. 1/2 in. 3/4 in. 1/2 in. 3/8 in. 1/2 in. 3/8 in. 1/2 in. 3/8 in. 1/2 in. 3/4 in. 1/2 in. 3/8 in. 1/2 in. 3/4 in. 3/	F04 F06 F08 F12 T06 T08 T12 W08 W12 P04 P06 P08 P12 N04 N06 N08 N08 N12 S06 S08 S12	14510-PF-0016 14510-PF-0001 14510-PF-0003 7120-P 7120-P 7120-P 7120-P 7120-P 7120-P 7120-P 7100-T 14530-PF-0025 14530-PF-0025 14530-PF-0021 14530-PF-0002 7100-T 71	(Nut not 7200-F 7200-F 7200-F 7200-F 7200-F 7200-F 7200-F 7200-F 7200-7 7200-7 7200-7 7400-7 7400-7 7400-7 7400-7 7400-7 7400-7 7400-7 7010-7 7010-7 7010-7 7010-7 7010-7 7010-7 7010-7
		2 19 19 19 12 12 12 14002x 14702x 147	etect x.0009 x.0010 x.0011 x.0012 x.0011 x.0012 x.0012 x.0012 x.0021 x.0022 x.0023 x.0024 x.0025 x.005 x.05	LF0 LF1 LF2 LF3 LC0 LC1 Descr SFS0 SFS1 SFS2 SFS3 SFD0	15 ft 1 15 ft 1 25 ft 1 25 ft 0 25 ft 0 15 ft 1 15 ft 1 25 ft 1 25 ft 1 15 ft 1 25 ft 1 15 ft 1 15 ft 1 15 ft 1 15 ft 1	OPTIONAL NOT INCLU	JDED ith no amplifier ith no amplifier	ir fier ir fier ier SFS0 ier SFS1 ir SFS2 ier SFS3 ir SFD0	Flaretek Compatible Tube Out Weldable Pillar S-300 FNPT Synchro- Flaretek Synchro- Flaretek	1/4 in. 3/8 in. 1/2 in. 3/4 in. 3/8 in. 1/2 in. 3/4 in. 3/4 in. 1/2 in. 3/4 in. 3/4 in. 3/4 in. 1/2 in. 3/4 in. 3/4 in. 3/6 in. 1/2 in. 1/6 in. 1/7 in. 1/7 in. 1/6 in. 1/7	F04 F06 F08 F12 T06 T08 T12 W08 W12 P04 P04 P04 P06 P08 P12 N04 N08 N12 S06 S08 S12 L04 L06	14510-PF-0016 14510-PF-0001 14510-PF-0003 7120-P 7120-P 7120-P 7120-P 71300-P 14530-PF-0012 14530-PF-0012 14530-PF-0012 14530-PF-0012 14530-PF-0001 14520-TE-0009 14520-TE-0009 14520-TE-0001 14520-TE-0001	(Nut not 7200-P 7200-P 7200-P 7200-P 7200-P 7200-P 7200-P 7000-T F-0001 F-0002 F-0001 7400-T 7400-T 7400-T 7400-T 7400-T 7400-T 7400-T 70001 8-0002 E-0003 E-0003 F-0002 7010-T 7010-T 7010-T 7800-T 7800-T
		2 19 19 19 10 10 10 10 10 10 10 10 10 10	etect x-0009 x-0010 x-0011 x-0012 x-0021 x-0021 x-0021 x-0023 x-0024 x-0024 x-0024 x-0026	LF0 LF1 LF2 LF3 LC0 LC1 Descr SFS0 SFS0 SFS0 SFS2 SFS3 SFD0 SFD1	iption 15 ft 1 25 ft 1 25 ft 1 25 ft 0 15 ft 1 15 ft 1 25 ft 1 15 ft 15 f	OPTIONAL NOT INCLU fiber optic cable wi fiber optic cable wi fiber optic cable wi conductivity cable conductivity cable conductivity cable fiber optic cable wi fiber optic cable wi fiber optic cable wi fiber optic cable wi	JDED ith no amplifier ith not amplifier ith no amplifier ith n	r SFS0 ier SFS0 ier SFS1 r SFS2 ier SFS3 r SFD0	Flaretek Compatible Tube Out Weldable Pillar S-300 FNPT Synchro- Flare PrimeLock	1/4 in. 3/8 in. 1/2 in. 3/4 in. 3/8 in. 1/2 in. 3/4 in. 1/2 in. 3/6 in. 3//6 in	F04 F06 F08 F12 T06 T08 F12 F08 F12 F08 F08 F02 P04 P04 P06 P08 P02 P04 P06 P08 N04 N04 N06 S08 S08 S12 S06 S08 S12 S06 S08 S12 S06 S08 S12 S06 S12 S06 S12 S12 S12 S12 S12 S12 S12 S12 S12 S12	14510-PF-0016 14510-PF-0003 14510-PF-0003 7120-P 7120-P 7120-P 7120-P 7120-P 7120-P 71300-P 71300-P 71300-P 14530-PF-0012 14530-PF-0012 14530-PF-0012 14520-PF-0013 14520-TE-0009 14520-TE-0009 14570-PF-0014	(Nut not 7200-P 7200-P 7200-P 7200-P 7200-P 7200-P 7200-P 7200-P 70003 F-0003 F-0001 F-0002 7400-T 7400-T 7400-T 7400-T 7400-T 7400-T 7400-T 7010-T 7010-T 7010-T 7800-T 7800-T
		2 19 19 19 12 12 12 14002x 14702x 147		LF0 LF1 LF2 LF3 LC0 LC1 Descr SFS0 SFS1 SFS2 SFS3 SFD0	iption 15 ft 1 25 ft 1 25 ft 1 25 ft 0 15 ft 0 15 ft 1 15 ft 1 25 ft 1 15 ft 1 15 ft 1 15 ft 1 15 ft 1 15 ft 1 25 ft 1 15 ft 1 25 ft 1 15 ft 1 25 ft 1 15 ft 2 5 ft 1 15 ft 1 25 ft 1 15 ft 1	OPTIONAL NOT INCLU	JDED ith no amplifier ith D10	ir fier ir fier ir SFS0 ir SFS0 ir SFS1 ir SFS2 ir SFS1 ir SFS1 ir SFS1 ir SFS1 ir SFS1 ir SFS1 ir SFS0 ier SFD1 ir SFD0 ier SFD0 i	Flaretek Compatible Tube Out Weldable Pillar S-300 FNPT Synchro- Flare PrimeLock	1/4 in. 3/8 in. 1/2 in. 3/4 in. 3/8 in. 1/2 in. 3/4 in. 3/4 in. 1/2 in. 3/4 in. 3/4 in. 3/4 in. 1/2 in. 3/4 in. 3/6 in. 1/2 in. 1/6 in. 1/7 in. 1/7 in. 1/6	F04 F06 F08 F12 T06 T08 T12 W08 W12 P04 P04 P04 P06 P08 P12 N04 N08 N12 S06 S08 S12 L04 L06	14510-PF-0016 14510-PF-0001 14510-PF-0003 7120-P 7120-P 7120-P 7120-P 71300-P 14530-PF-0012 14530-PF-0012 14530-PF-0012 14530-PF-0012 14530-PF-0001 14520-TE-0009 14520-TE-0009 14520-TE-0001 14520-TE-0001	(Nut not 7200-P 70001 F-0002 7400-T 7400-T 7400-T P-0002 E-0001 E-0002 E-0007 7010-T 7010-T 7010-T 7800-T 7800-T 7800-T 7800-T



.

.

.



2. Installation

2.1 Precautions

Handling

Do NOT lift pump by fiber optic cables, quick exhaust valves nor air tubing.

Installation Orientation

PFA015 pumps must be installed in an upright position. The check valves are actuated by gravity and/or flow, and they will not seat if the pump is not upright.

Timer Mode

PFA015 pumps require an end of stroke detection mechanism (pressure switch) to prevent over stroking in timer mode. Operating a PFA015 in timer mode without stroke detection will void the pump warranty.

Required Air Flow (Shuttle Valve)

PFA015 pumps require 1/4 in minimum orifice with unrestricted air flow.

Required Air Flow (Solenoid Valve)

PFA015 pumps require a 0.75 Cv solenoid. Using a reduced Cv will reduce flow rates. Using a valve with more than 20% greater Cv will change operating parameters, reduce pump life and void the warranty.

Under Supply of Air

PFA015 pumps operate erratically or stall when air supply is insufficient. Ensure use of air supply pressures higher than averaged air consumption lines in performance charts. Air supply lines and fittings must meet minimal inner diameter requirements shown in the installation instructions.

Air Supply Pressure

Operating PFA015 pumps ~35% below max air pressure may significantly extend pump life. PFA015 pumps require 20 psi minimum air pressure. Operation above 7 Bar (100 psi) may damage the pump and void the warranty.

Suction Lift

PFA015 pumps have an initial suction lift capacity of 3 ft. For best results minimize suction lift.

Liquid Inlet/Outlet Connections

PFA015 liquid ports are not NPT nor any other standard. Use of connectors other than those supplied by White Knight will damage the pump and void the warranty.

Liquid Line Restriction

PFA015 pumps may be controlled by closing liquid outlet lines. However, restricting liquid supply lines increases wear and should be avoided. Do NOT pump against a closed liquid inlet. It will damage the pump and void the warranty.

Running Dry

PFA015 pumps use the pumped liquid to lubricate their shafts. The pumps will cycle faster and wear more than normal when run dry, which may cause damage and loss of self-prime abilities. Standard models should not be run dry after startup and are not warrantied under dry run conditions. Dry-run capable PFASD015 models may run dry for short periods. Warranty of dry-run models is one-year. Extended warranties are available.

Pulse Dampener with Shuttle Valve

Air supply pressure to PFA015 pumps should be at least ten psi higher than the liquid line pressure when using a pulsation dampener. Failure to do so may cause erratic operation.

Cross Contamination

PFA015 pumps use porous material that may retain chemicals. Take precautions to avoid cross contamination.





PFA015 Owner's Manual

2.2 Warnings

Pressurized Material



Pumps in use contain pressurized materials. Eliminate liquid and air pressure via shut off valves before pump is serviced or removed from the system.

High Temperature



Heat may transfer to exterior surfaces when pumps operate with high temperature fluids. Avoid direct contact with the pump when high temperature fluids are present.

Hazardous Chemical



Use appropriate personal protective equipment when handling pump. Reference Material Safety Data Sheet (MSDS) for information specific to your chemicals.

Loud Noise



Pump exhaust air contributes to work area noise levels. Only operate pumps with approved muffler media, and use ear protection in noisy conditions.

2.3 Advantages

Head Pressure / Dead-Head

PFA015 pumps can be controlled by adjusting their liquid outlet pressures and can be installed with head pressures up to dead-head (e.g. equal liquid and air pressures) with no damage to the pump.

Thermal Cycling

PFA015 pumps require no maintenance when operated within their performance range, even in thermal cycling applications.

2.4 Environment & System

Oversized Inlet Line

Pumps operate optimally with liquid inlet lines larger than the liquid outlet lines. This reduces strain on the bellows and may reduce pulsation in the pump outlet.

Clean Supply Air (CDA)

PFA015 pumps require use of Class 2 air for particles and moisture per ISO 8573-1. Use 10 micron filter; maintain -40°C dew point. A point-of-use filter is recommended during first six months of operation in new fabs/systems due to high risks of debris that can damage pumps and void warranty.

Flammable Solvents

PFA015 pumps are not constructed from conductive materials. System that pump flammable solvents should be properly grounded to avoid ignition by static charge. A River's Edge test of isolative pumps with flammable liquids indicated that liquids must be grounded and other procedures should be followed. Copy of test available.

Pumping Liquids Near Boiling Point

Minimizing suction lift reduces pulsation and the potential for boiling or outgassing of liquid in the inlet of the pump. Although reciprocating pumps can pull suction lift, pump performance and life increase when suction lift is minimized or eliminated.

Abrasive Slurry

Pumping abrasive slurry may accelerate wear of components. PFA015 pumps are warrantied when used with slurry. However, normal wear is not covered by warranty.

Environmental Temperature


PFA015 pumps are rated for 0°C (32°F) -50°C (122°F) environmental temperatures. Do not freeze fluid in pump. Operation below 0°C may accelerate wear. Normal wear is not covered by warranty.





D10 amplifier must be calibrated before attaching fiber optic probes to the pump.

2.5 Installation Instructions

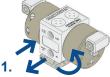

Set lever to up position. Slide base plate forward or pump body backward.





6.

Insert fiber-optics fully into heads. Push in ferrule and gripper; hand-tighten nut.



Lift pump off of base plate.



Attach fittinas to pump. Tighten to 20 inch-lbs.



drilled holes.

Attach tubes and fittings

instructions. Use backer

wrench to hold fittings in

per manufacturer

place at pump.

Pull-back dismount is standard. See steps 3.1-3.3 for forward dismount.



Set pump on base knobs: slide it forward. Set lever to down position.




Set air line via 1/4 in FNPT ports on quick exhaust valves. Line must be 3/16 in minimum orifice.

Push-Forward Dismount **Configuration Setup**

Replace step 4 with steps 3.1-3.3 to re-configure the base plate to pushforward dismount.



Move knobs to opposite sides.



cap socket screws into pre-

Set pump on base knobs; slide it backward.



Move lever down to locked position.

Install with Rigid Base Plate *Requires push-forward dismount configuration (steps 3.1-3.3)



Remove L bracket. Set lever in neutral (up) position.



Slide pump forward: lift it off base plate.



Fix base plate to work station. See step 4 above.



base plate.

.

Move lock lever to down position. Reattach L bracket. Tighten to 12 in-lb.

Liquid Inlet/Outlet

Liquid ports are not NPT nor any other standard. Use of connectors other than those supplied by White Knight will damage the pump.





3. Control & Monitoring


Programmable Control

White Knight CPT-1 controllers monitor and adjust run mode, flow rate, leak detection and other pump operations.



D10 Amplifier Electrical Hookups & Dimensions

White Knight recommends Expert[™] D10 amplifier for use with fiber optic stroke and leak detection assemblies.

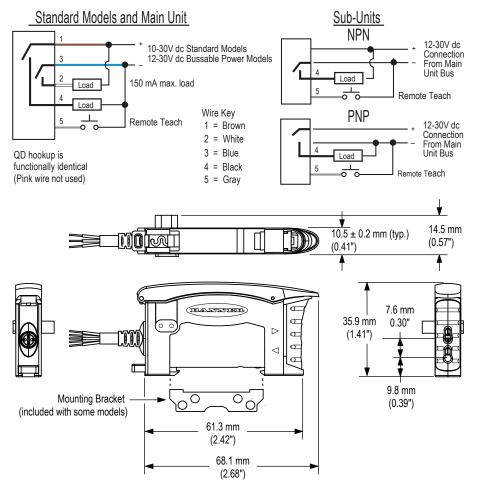






PFA015 Owner's Manual

3.1 Shift Logic for Fiber-optic Pumps

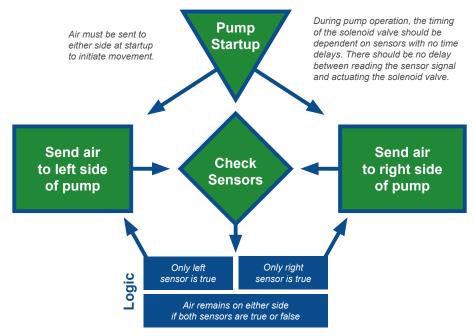






3.2 Fiber Optic Stroke Detection Installation

For standard end stroke, follow steps for both sides of the pump. For single-probe dual-detect, follow steps for only the left side.

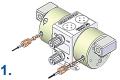

Insert fiber optic probes fully into heads. Push in ferrule and gripper; hand-tighten nut.



Open the top and slide the front face of the D10 up. Press the fiber optic ends into the holes on its front. Slide the face down to lock cables in place.

3.3 Calibrating D10 Amplifier for Stroke Detection

When calibrating the D10 Amplifier for stroke detection, the pump should be in the same operating conditions it will be in during normal operation (i.e. supply air pressure, back pressure, etc.). The Fiber Optic must be installed as per the instructions in section 3.1.

Calibration	:		
	Push Button	Remote Line	Result
Access Dynamic TEACH Mode	Press and hold dynamic push button >2 seconds.	Hold Remote line low (to ground) >2 Seconds.	Power LED: OFF Output LED: OFF Bar graph: LO & DO Alternately Flashing
TEACH Sensing Conditions	 Hold push button. Operate pump normally for 15 seconds. 	Hold remote line low (to ground). Operate pump normally for 15 seconds.	Power LED: OFF Output LED: OFF Bar graph: LO & DO Alternately Flashing
Return to	Release button	Release remote line/switch	Teach Accepted Power LED: ON Bar graph: One LED flashes to show relative contrast (successful setup requires minimum value of 4). Sensor returns to Run Mode with new settings.
Run Mode			Teach Unaccepted Power LED: OFF Bar graph: #1, 3, 5, 7 alternately flash to show failure to sense. Sensor returns to Run mode without changing settings. Set up again if value shows <4.

Upon completion of a successful learning cycle, the D10 Amplifier will continuously learn and self-teach to maintain the same cycle rate count readings.





3.4 Conductivity Leak Detection Installation


Leaks are identified if conductive fluid contacts a sensor. Sensor provides a Sink (NPN) or Source (PNP) signal, depending on the wire setup. See the wiring diagrams below. *Conductive leak detection does not qualify for use in explosion-proof environments. Conductive fluid required.*

See below for elbow out configuration.

Remove leak adapter from assembly.

1.

2. Replace NPT plug in "L" port with probe. Hand Tighten. Attach cable to signal translator (e.g. PLC).

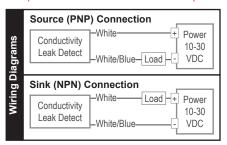

3.5 Fiber Optic Leak Detection Installation

D10 amplifier must be calibrated before attaching fiber optic probes to the pump. Fiber optic sensors can melt if used at >130°C ($266^{\circ}F$), causing leak detect failure.


2

See below for elbow out configuration.




1.

Remove leak adapter and leak detect probe from fiber optic assembly.

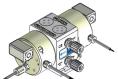

Lower ferrule and gripper until snug against the probe. Hand tighten female gripper nut.



For straight out configuration replace NPT plug in "L" port with the probe. Hand-tighten.




Insert the fiber optic cable until it contacts the bottom of the probe.





Open the top and slide the front face of the D10 up. Press the fiber optic ends into the holes on its front. Slide the face down to lock cables in place.

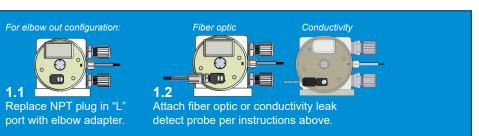



Ver. 2.1.5 | 5 Dec 2023 | P. 10 Subject to change without notice



3.6 Calibrating D10 Amplifier for Leak Detection

Step 1: Power On D10 Amplifier & Set "Dark Operate" Mode:					
	Push Button	Remote Line	Result		
	0.04 s ≤ "Click" ≤ 0.8 s	$0.04 \ s \le T \le 0.8 \ s$			
Access Setup Mode	Press and hold both buttons > 2 seconds.	Double-pulse remote line	 Green Power LED turns OFF. Output LED remains active. Icons continue to display current setup. Bargraph turns OFF. 		
Select Settings	Press either button until LEDs show desired settings.	Pulse the remote line until LEDs show desired settings. 	Sensor toggles through these setting combinations: LO Normal Speed No Delay (default) DO Normal Speed No Delay LO High Speed No Delay DO High Speed No Delay DO High Speed No Delay DO High Speed Delay LO Normal Speed Delay DO Normal Speed Delay LO High Speed Delay DO High Speed Delay DO High Speed Delay		
Return to Run Mode	Press and hold t both buttons >2 seconds.	Hold remote line low > 2 seconds. > 2 seconds	Green Power LED turns ON. Sensor returns to Run mode with new settings.		

Step 2: Access "Single-Point Dark Set" Mode

	Push Button	Remote Line	Result
	0.04 s ≤ "Click" ≤ 0.8 s	$0.04 \ s \le T \le 0.8 \ s$	
Access Set Mode	Press and hold static button > 2 seconds.	Single-pulse remote line	Power LED: OFF. Output LED: ON (push button) OFF (remote line) Static LEDs: LO & DO alternately flashing

Step 3: Set Sensing Condition

Set condition to "leak detection" sensing while probe tip is submerged in liquid. Then, remove the leak probe from liquid and reinserted into the "L" port. Amplifier will now signal when moisture if detected on the probe tip.

	Push Button	Remote Line	Result	
	0.04 s ≤ "Click" ≤ 0.8 s	0.04 s ≤ T ≤ 0.8 s		
g Condition	Present sensing condition Five-click static button	Present sensing condition • Five-pulse remote lne	Power LED: ON. Output LED: ON (push button) OFF (remote line) Bargraph: 4 indicators flash. Sensor returns to Run mode with new sett	or 600 6 5 0 0 0 0 5 0
Set Sensing	- +		Power LED: ON. Output LED: ON (push button) OFF (remote line) Bargraph: #1, 3, 5, 7 flash for failure. Sensor returns to Set sensing condition.	




PFA015 Owner's Manual

I

4. Ordering Instructions

HITE KN

Required (Default Model) Additional Options (Blank if not needed)



Options 1-3 are required. Leave Additional Options blank if not desired. Only add Outlet if different than Inlet.

engineer approved

Default options are highlighted				
1. Pump Mode	əl			
Standard	PFA015			
Dry-Run	PFASD015			
2 Check Ball Material				

2. Officer Bull Mate	nui
PTFE Check balls	blank
PFA Check balls	F

3. Inlet Fitting			
Front straig	ht only		
Flaretek	1/4 in.	F04	
Compatible	3/8 in.	F06	
	1/2 in.	F08	
-0	3/4 in.	F12	
Tube Out	3/8 in.	T06	
	1/2 in.	T08	
	3/4 in.	T12	
Weldable	1/2 in.	W08	
	3/4 in.	W12	
Pillar S-300	1/4 in.	P04	
1	3/8 in.	P06	
1000 CO	1/2 in.	P08	
	3/4 in.	P12	
FNPT	1/4 in.	N04	
	3/8 in.	N06	
	1/2 in.	N08	
	3/4 in.	N12	
Synchro-	3/8 in.	S06	
Flare	1/2 in.	S08	
0	3/4 in.	S12	
PrimeLock	1/4 in.	L04	
C	3/8 in.	L06	
CO CO CO	1/2 in.	L08	
	3/4 in.	L12	

4. Leak Detection	
No leak detection	blank
15 ft fiber optic cable with no amplifier	LF0
15 ft fiber optic cable with D10 amplifier	LF1
25 ft fiber optic cable with no amplifier	LF2
25 ft fiber optic cable with D10 amplifier	LF3
15 ft conductivity cable	LC0
25 ft conductivity cable	LC1

5. Stroke Detection				
No stroke detection	blank			
DUAL PROBE OPTIONS				
15 ft fiber optic cable with no amplifier	SFD0			
15 ft fiber optic cable with D10 amplifier	SFD1			
25 ft fiber optic cable with no amplifier	SFD2			
25 ft fiber optic cable with D10 amplifier	SFD3			
SINGLE PROBE, DUAL DETECT OPTIONS				
Single probe, dual detect, no fibers	SFS			
15 ft fiber optic cable with no amplifier	SFS0			
15 ft fiber optic cable with D10 amplifier	SFS1			
25 ft fiber optic cable with no amplifier	SFS2			
25 ft fiber optic cable with D10 amplifier	SFS3			

* Fiber optic cables ordered separately. Fiber optics are required for operation. Standard configuration includes dual probe WITHOUT fibers. See stroke detection options to order fiber optic cables or single probe option.

> Timer mode operation requires end-of-stroke detection. Use of timer mode without stroke detection voids the warranty.

Operating the pump without the included quick exhaust valves (QEVs) voids pump warranty. Customers may use their own QEVs with the optional NPT adapter.

6. Outlet Fitting Straight only. Select Top or Front.		Front	Тор	
Same as Inlet		blank	n/a	
Flaretek Compatible	1/4 in.	FF04	TF04	
	3/8 in.	FF06	TF06	
	1/2 in.	FF08	TF08	
	3/4 in.	FF12	TF12	
Tube Out	3/8 in.	FT06	TT06	
	1/2 in.	FT08	TT08	
	3/4 in.	FT12	TT12	
Weldable	1/2 in.	FW08	TW08	
	3/4 in.	FW12	TW12	
Pillar S-300	1/4 in.	FP04	TP04	
	3/8 in.	FP06	TP06	
	1/2 in.	FP08	TP08	
	3/4 in.	FP12	TP12	
FNPT	1/4 in.	FN04	TN04	
	3/8 in.	FN06	TN06	
	1/2 in.	FN08	TN08	
	3/4 in.	FN12	TN12	
Synchro-	3/8 in.	FS06	TS06	
Flare	1/2 in.	FS08	TS08	
000	3/4 in.	FS12	TS12	
PrimeLock	1/4 in.	FL04	TL04	
Con	3/8 in.	FL06	TL06	
100 00	1/2 in.	FL08	TL08	
	3/4 in.	FL12	TL12	

Revision

No revision	blank
Contact support for revision or copy exact code activatio details. Configured part nun are not Copy Exact Part Nu	n 1bers
support@wkfluidhandling.co	om 🛛







5. Pump Service

Pumps fully rebuilt by White Knight, certified rebuilders, or technicians certified by White Knight receive full warranty renewal. Details below.

White Knight Rebuilds

Request factory rebuilds by web form at: https://wkfluidhandling.com/support/rma/. An RMA# will be provided after processing.

*Customers must follow decontamination instructions in Section 4.4 when returning a pump to White Knight.

Rebuild Pump as Certified Technician


Certified Rebuilders

White Knight's global network of certified rebuilders expedite rebuild turn-around time and minimize shipping costs. Find certified rebuilders at: https://wkfluidhandling.com/rebuilders/

White Knight offers trainings to certify technicians to rebuild pumps. Technicians who pass the training are issued a two-year certification. During the two years, parts in pumps rebuilt by the technician receive a full warranty. See: https://wkfluidhandling.com/virtual-rebuilds/

5.1 Rebuild Kits & Parts

Rebuild kit for PFA015 is RBPFA015-1. Rebuild kit for PFASD015 is RBPFASD015-1 (labor not included). To request rebuilds by White Knight, use RBPFA015-5 or RBPFASD015-5, respectively (labor included).

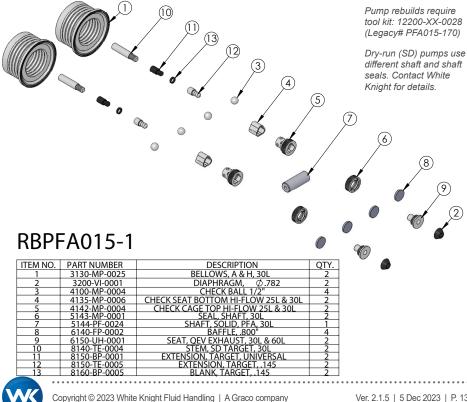

P: 435.783.6040 | support@wkfluidhandling.com | https://wkfluidhandling.com

Ver. 2.1.5 | 5 Dec 2023 | P. 13 Subject to change without notice



5.2 Return Pump for Service

Follow decontamination instructions when returning a pump for service.

DO NOT REMOVE PAGE FROM MANUAL.

Copy page from manual or download at https://wkfluidhandling.com/support/rma/.

Decontamination Instructions

PRINT COMPLETED DECONTAMINATION CERTIFICATION. IT MUST BE INCLUDED IN YOUR RMA SHIPMENT.

White Knight products are designed for use with caustic and otherwise dangerous liquids. Handle every product as if it contains dangerous chemicals whether or not it actually does.

- · Only those with adequate safety training should attempt to handle used pumps.
- Wear adequate safety gear appropriate for chemicals that have been in the pump.
- Review relevant Material Safety Data Sheets (MSDS) before handling the pump.
- · Review emergency numbers for use in event of an accident.
- Prepare Ph papers, showers, antidotes, clean-up equipment, neutralizers, and other safety devices
 used to detect, neutralize or minimize effects of chemicals described in appropriate MSDS documents.

Rinse with DI Water

Circulate DI water through pump for twenty minutes before disassembly and/or double bagging for shipment. If pump is nonfunctional, force DI water from inlet through outlet for 40 minutes before shipment preparations.

Remove Pump from Station:

- 1. Disconnect liquid tubing connectors from front of pump (opposite shuttle valve).
- Plug NPT fittings with PTFE plug, Flare fittings with flare nose cover and cap, another plug as can be recommended by connected symplet
- or other plug or cap as recommended by connector supplier.Disconnect air supply tubing from face of shuttle valve.
- Loosen mount screw from base plate. (Note: do not remove screw from base plate).
- Remove base plate using proper tool for the fastening devices (e.g. Allen wrench or screw driver). Note: Base plate may stay if needed for replacement pump to be used.
- 6. Return all removed parts to the pump.

Return Pump to White Knight:

- 1. Rinse pump with DI water as described above after removing it from its station.
- 2. Drain remaining DI water from the pump inlet and outlet liquid tubing connectors.
- 3. Plug liquid outlets as described in the Remove Pump from Station section above.
- 4. Dry the pump, double bag it, and seal it in thick polyethylene bags.
- 5. Return the pump to its original packaging.
- 6. Include MSDS for the chemical that the pump was handling in the box with the pump.
- 7. Obtain RMA number from White Knight and write it on the outside of the box.
- 8. Ship to White Knight following all rules, regulations and laws regarding shipment of dangerous materials. Ship freight pre-paid. No collect shipments will be accepted. Unauthorized use of White Knight shipping accounts will result in the adding of freight to the bill in addition to a service charge.

Include All Pump Components:

Pumps returned to White Knight for evaluation, service or repair must be complete with all components, including but not limited to base plate, mount screws, tubing connectors, tubing connector caps, flare noses, shuttle valves, mufflers, and tubing. Missing parts will be added to the pump and charged to the customer.





DO NOT REMOVE PAGE FROM MANUAL.

Copy page from manual or download at https://wkfluidhandling.com/support/rma/.

Decontamination Certification

COMPLETE AND PRINT THIS FORM. IT MUST BE INCLUDED IN YOUR RMA SHIPMENT.

I, the undersign decontamination been followed for	n and safety	procedures	s described	d in Decont	amination Instruc	, certi ctions sect	ify that all tion have	
RMA#:								
(We cannot proces	ss returns with	out an RMA r	number.)					
Serial#:								
(We cannot proces	ss returns with	out a product	serial numb	er.)				
Metal Expo		ner metals if n	necessary.)					
Product was	used in a M	etal Proces	s. 🛛 Ye	s 🗖 No				
Product was	used in a <u>C</u>	<u>opper</u> Meta	l Process.	🗖 Yes	🗖 No			
Product was	used with:							
AluminumTungsten		Gold Gold Gother: _			Platinum	Silver	∎Tin	Titanium
Chemical E (Check all that app			if necessary	γ.)				
Product was	NOT used in	n chemicals	(DI Water	r only).				
Product was	used in che	micals.						
 Ammonia Nitric Acid 	_	m Hydroxide c Acid	_ ,	hloric Acid c Acid	Hydrofluoric Ac	_ ,	0	
Shipping In			ch the prod	duct has be	en exposed by a	clearly and	conspicue	ouslv

Please indicate metal processes to which the product has been exposed by clearly and conspicuously labeling the outside of the return package with the metal.

Products exposed to Metal Processes	
must be sent to the following address:	

Products <u>NOT</u> exposed to Metal Processes must be sent to the following address:

White Knight Fluid Handling 187 East 670 South, Suite B Kamas, UT 84036

Print Name: _____

White Knight Fluid Handling 187 East 670 South, Suite C Kamas, UT 84036

 Signature:
 Date:

 Copyright © 2023 White Knight Fluid Handling | A Graco company
 Ver. 2.1.5 | 5 Dec 2023 | P. 15

 P: 435.783.6040 | support@wkfluidhandling.com | https://wkfluidhandling.com
 Ver. 2.1.5 | 5 Dec 2023 | P. 15





6. Warranty

White Knight follows strict manufacturing, assembly and testing procedures to ensure consistency and reliability.

White Knight warrants PFA015 pumps and components are free from defects in materials and workmanship for two years from our shipment date or your installation date if provided within 90 days of shipment from our facility.

Failures due to normal wear, misuse, abuse or unauthorized disassembly nullify this warranty.

White Knight does not guarantee the suitability of products for specific applications. White Knight is not liable for any damage or expense resulting from use or misuse of its products in any application. Responsibility is limited solely to repair or replacement of defective products or components.

Prior written, faxed or emailed approval must be obtained from White Knight before returning any product or component for warranty consideration. All determinations regarding cause of failure are made by White Knight, and all decisions regarding warranty fulfillment or nullification are made by White Knight.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, INCLUDING ANY GUARANTEE OF SUITABILITY FOR ANY PURPOSE. NO VARIATIONS OF THIS WARRANTY SHALL BE HONORED NOR CONSIDERED LEGALLY BINDING, EXCEPT WRITTEN AGREEMENTS SIGNED BY THE CEO OF WHITE KNIGHT FLUID HANDLING.

Accessories

See ordering instructions or contact us for details.

Stroke Detection

- Fiber Optic stroke detection with or without sensor
- Solid state pressure switch
- Solid state dual pressure switch

Leak Detection

- Fiber Optic leak detection
- with or without sensor
- · Conductivity leak detection

CPT-1

· Control/monitor run mode and flow rate.

Catcher[™] Pre-Filters

- · In-line and pump-mounted options
- Large through holes to avoid loading
- Filter may be removed without removing the Catcher[™] from the pump or the line.
- Pumps damaged by passing solids that use a Catcher™ are repaired as in warranty.

Filter Housing

- 100% non-metallic
- Allows for filter changing without disconnecting the inlet/outlet lines
- Rated for temperatures up to 210°C
- Install with industry standard connections
- Designed to allow for thermal cycling
- Upright and inverted installation options

Quick Exhaust Valves

 Allows for immediate escape of exhaust air reducing pulsation and exposure of solenoid valve to corrosive fumes

- In-line and pump-mounted options
- UHMW-PE design
- · Comes standard with a one-year warranty

Pulse Dampeners


- Uses same CDA as supplied to pump
- In-line and pump-mounted options
- Sizes available for all PFA Series pumps
- Self-adjusting, Auto-Level Valve is regulated by liquid line pressure











CE MARKING SPECIALISTS Hoi Yuen Road, Kwun Tong, Kowloon, Hong Kong

CERTIFICATE & DECLARATION OF CONFORMITY FOR CE MARKING

Company contact details: White Knight Fluid Handling Inc. 187 E. 670 S., Kamas, Utah, 84036, USA

White Knight Fluid Handling Inc. declares that their:

Bellows Pump Line

PSA030, PSA060, PSA140, PSH030, PSH060, PSH140, PSU030, PSU060, PSU140, PSA015, PSR050, PSR025, PFA030, PFA060, PFA140, PFH030, PFH060, PFH140, PFU030, PFU060, PFU140, PXA030, PXA060, PXA140, PXH030, PXH060, PXH140, PXU030, PXU060, PXU140, PFA015, LHA015, LHA030, LHA070

Diaphragm Pump Line (Non Conductive) PSD04TE, PSD06TE, PSD08TE, PSD16TE, PSD24TE, PSD04UH, PSD06UH, PSD08UH, PSD16UH, PSD24UH, PSB100

Diaphragm Pump Line (Conductive) PSD04TC, PSD06TC, PSD08TC, PSD16TC, PSD24TC, PSD04UC, PSD06UC, PSD08UC, PSD16UC, PSD24UC

Legacy Pump Line PLS30, PLS60, PLS120, PLX30, PLX60, PLX120, PX30, PX60, PX120, PLF30, PLF60, PLF120

> Metering Pumps PPM100, PEM100, PEM050

> Plastic Pumps PHC40-2, PPMC300, PPMA

TPA07 Pressure Transducer

are classified within the following EU Directives as applicable:

Machinery Directive 2006/42/EC Low Voltage Directive 2014/35/EU Electromagnetic Compatibility Directive 2014/30/EU RoHS 2 Directive 2011/65/EU

and further conform with the following EU Harmonized Standards as applicable: EN 809;1998+A1;2009 EN 60204-1;2006 + A1;2009 EN 61000-6-2;2005 EN 61000-6-4;2007+A1;2011

Dated: 16 January 2017 Position of signatory: Product Manager Name of Signatory: Cory Ammon Simmons Signed below: on behalf of White Knight Fluid Handling Inc.





White Knight Support

187 E. 670 S. Kamas, UT 84036

Phone: 435.783.6040 Toll Free: 888.796.2476 Fax: 435.783.6128

support@wkfluidhandling.com

https://wkfluidhandling.com/support/



Part No. 8200-LM-0076

.