




### Configuration

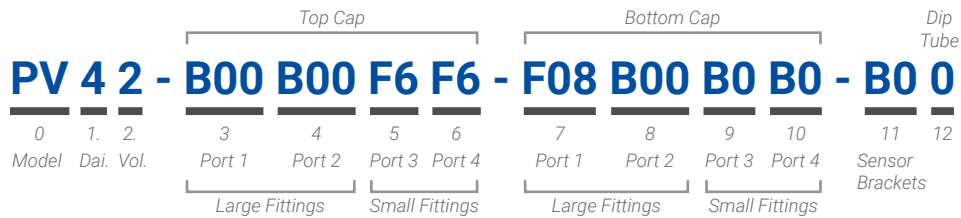

### Instructions

A selection is required for each option.  
Contact support for revision or copy exact information.

Standard options are highlighted

#### 0. Model

Standard pressure vessel **PV**

#### 1. Diameter

4 inch **4**

#### 2. Volume

1 liter	1
2 liter	<b>2</b>
3 liter	3
4 liter *	4
5 liter *	5
6 liter *	6

\* Two coupled tubes.

Large Fittings		Top Cap		Bottom Cap	
		3. Port 1	4. Port 2	7. Port 1	8. Port 2
Plugged		<b>B00</b>	<b>B00</b>	<b>B00</b>	<b>B00</b>
Flaretek Compatible	1/2 in.	F08	F08	<b>F08</b>	F08
	3/4 in.	F12	F12	F12	F12
	1 in.	F16	F16	F16	F16
Pillar S-300	1/2 in.	P08	P08	P08	P08
	3/4 in.	P12	P12	P12	P12
	1 in.	P16	P16	P16	P16
Primelock	1/2 in.	L08	L08	L08	L08
	3/4 in.	L12	L12	L12	L12
	1 in.	L16	L16	L16	L16
FNPT	1/2 in.	N08	N08	N08	N08
	3/4 in.	N12	N12	N12	N12
	1 in.	N16	N16	N16	N16
Tube Out	1/2 in.	T08	T08	T08	T08
	3/4 in.	T12	T12	T12	T12
	1 in.	T16	T16	T16	T16
Weldable	3/4 in.	W12	W12	W12	W12
	1 in.	W16	W16	W16	W16

Small Fittings		Top Cap		Bottom Cap	
		5. Port 3	6. Port 4	9. Port 3	10. Port 4
Plugged		<b>B0</b>	<b>B0</b>	<b>B0</b>	<b>B0</b>
Flaretek Compatible	1/4 in.	F4	F4	F4	F4
	3/8 in.	<b>F6</b>	<b>F6</b>	F6	F6
Pillar S-300	1/8 in.	P2	P2	P2	P2
	1/4 in.	P4	P4	P4	P4
	3/8 in.	P6	P6	P6	P6
FNPT	1/4 in.	N4	N4	N4	N4
	3/8 in.	N6	N6	N6	N6

#### 11. Sensor Brackets

Two Brackets, No Sensors	<b>B0</b>
Two Brackets, One Sensor	B1
Two Brackets, Two Sensors	B2
Two Brackets, Three Sensors	B3
Two Brackets, Four Sensors	B4
Three Brackets, No Sensors	C0
Three Brackets, One Sensor	C1
Three Brackets, Two Sensors	C2
Three Brackets, Three Sensors	C3
Three Brackets, Four Sensors	C4
Four Brackets, No Sensors	D0
Four Brackets, One Sensor	D1
Four Brackets, Two Sensors	D2
Four Brackets, Three Sensors	D3
Four Brackets, Four Sensors	D4

#### 12. Dip Tube

\* Must match Volume option

No dip tube	<b>0</b>
Dip tube for 1-liter vessel	1
Dip tube for 2-liter vessel	2
Dip tube for 3-liter vessel	3
Dip tube for 4-liter vessel	4
Dip tube for 5-liter vessel	5
Dip tube for 6-liter vessel	6

#### Revision

No revision **blank**

Contact White Knight support for revision level or copy exact code activation details. Configured part numbers are not Copy Exact Part Numbers.  
Email: [support@wkfluidhandling.com](mailto:support@wkfluidhandling.com)  
Phone: 435.783.6040

